
USER MANUAL

 
**EKOBUY
4K HDMI SWITCH 4x1
ekb10075**

Enjoy the vivid world!


INTRODUCTION

4x1 4K HDMI Switch

The 4x1 hdmi switch support four HDMI ports by remote control or manual button to switch to a display terminal. The HDMI switch can support all hd formats including 720p, 1080i, 1080p multichannel audio. This product comes with two digital audio outputs (optical fiber and coaxial) and one 3.5 mm headphone output all the way, so it is more suitable for home theater systems

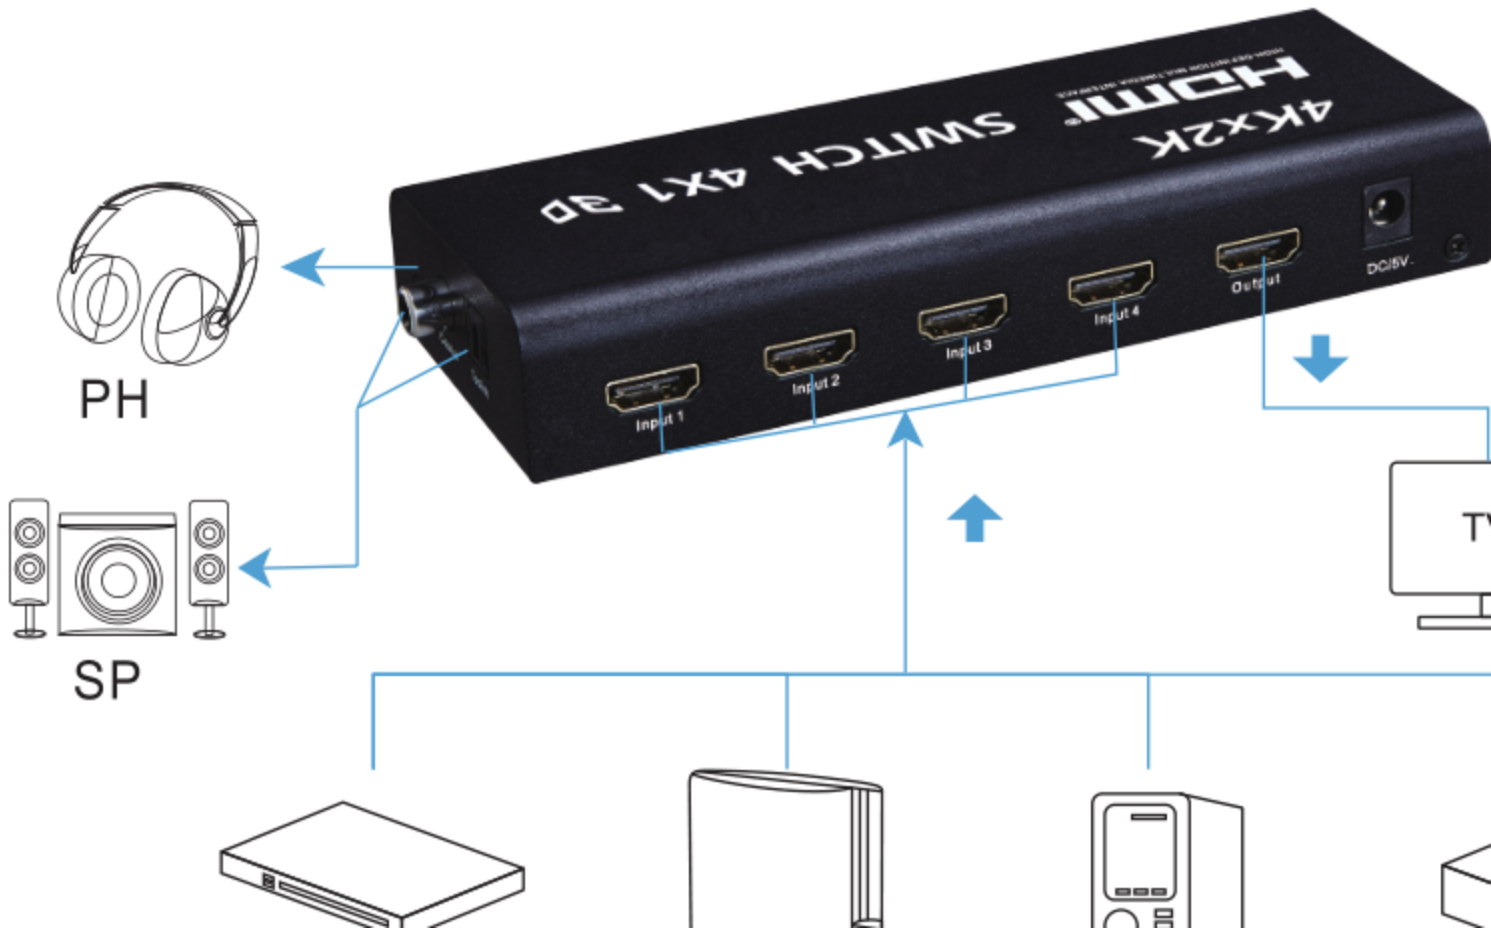

 5.1 Audio output showing picture

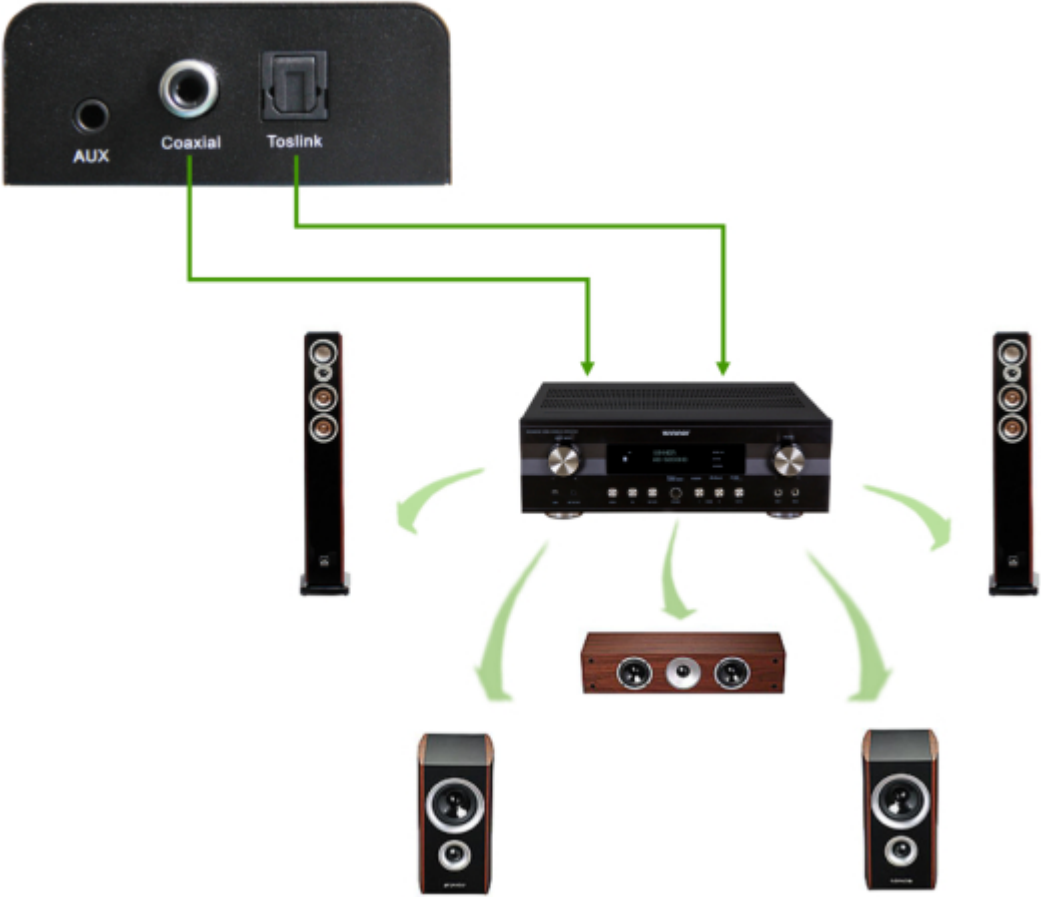

Product picture



FEATURES

- ▣ Support HDMI1.4b
- ▣ Support 3D
- ▣ Support HDCP1.4
- ▣ Support highest video resolution 3840*2160/30Hz
- ▣ Support 3.4Gbps data rate for tmds clock up to 340MHz
- ▣ Support 24/30/36 bit deep color
- ▣ Support standard AWG26 cable, input up to 8 metres ,output up to 8 metres
- ▣ Support single and high definition display for multiple sources, such as DVD Players and Satellite Receivers, Digital Projectors, A/V Receivers, Set top boxes
- ▣ Remote Control for operational flexibility and easy to control.
- ▣ Need DC5V/1A power supply
- ▣ Optical fiber, coaxial output support 5.1 sound track

SPECIFICATIONS

HDMI version	HDMI 1.4b
HDMI resolution	Up to 3840*2160/30Hz
Support video format.....	3D
Support video color format	24/30/36 bit deep color
Support audio format....	DTS-HD/Dolby-trueHD/DTS/Dolby-AC3/DSD
Max bandwidth.....
.....	340MHz
Max baud rate.....	3.4Gbps
Input cable distance.....	≤8m AWG26 HDMI standard cable
Output cable distance.....	≤8m AWG26 HDMI standard cable
Max working current.....	800mA
Power adapter format Input.....	AC (50HZ, 60HZ) 100V-240V; Output: DC5V/1A
Operating Temperature range.....	(-15 to +55°C)
Dimension (L x W x H)	167x67x28
(mm)	
Weight.....	240g

The remote control



1) Press the key 1 to switch to the input 1, L1 indicator lights up.

2) Press the key 2 to switch to the input 2, L2 indicator lights up.

3) Press the key 3 to switch to the input 3, L3 indicator lights up.

4) Press the key 4 to switch to the input 4, L4 indicator lights up.

Note: Input 1 is the default input when the power is on, and L1 indicator lights up at the same time.

Physical Connection Showing Picture



Input1



Input2



Input3




Input4



Audio output showing picture



 AUX

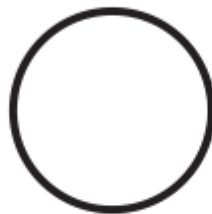

Coaxial



Toslink

Operating and Connecting

-
- 1 Connect** the HDMI source device and HDMI switch input ports with four HDMI cables
 - 2 Connect** HD displayer device (monitor or projector) with HDMI switch output ports with one HDMI cable.
 - 3 Connect 5V/1A power adapter** with **the HDMI switch** .

Audio Channel switching operations

Press the “Select” button of the switcher around 5 seconds, which can switch between 5.1 and 2.1 audio channel.

The Package includes

- 1. HDMI Switch**
- 2. IR Remote Control**
- 3. 5V DC Power adapter**
- 4. User Manual**